


## How to replace cartridge:

1. Remove the **Rubber Cover** (20) by slipping it off the back of the nozzle and pulling it over the front using a round tool; not a sharp tool, which can cut cover.
2. Remove the **Lever Arm Screw & Nut** (24) and the **Lever Arm** (6).
3. Unscrew **Lock Screw** (30) and extract the **Cartridge** from back end of nozzle with **Cage** (18).
4. Be sure when replacing **Cage** (18) to place cut-away part of **Cage** facing downward, so **Lever Arm** (6) can be inserted.
5. To insert new cartridge, reverse order beginning with 4-1 above and then proceed to 6.
6. Be sure **Lever Arm** (6) is placed ahead of **Stem Guide** (31) on cartridge unit.
7. To replace **Rubber Cover** (20) wipe body with detergent, insert nozzle end first then handle into cover. Use a round ended tool approx. 3/8" in diameter to stretch cover over back. Do not use sharp tool. Sharp tools can cut cover.

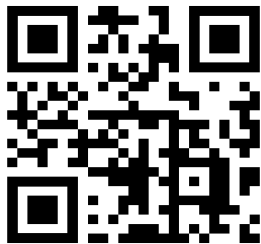

WDEWSNZASSY062020

## WATER-SAVER SPRAY NOZZLE

Assembly Instructions for

M-70, S-70, E-76, S-76, S-80, F-90 & S-90 SERIES



